


Double Burner Portable Gas Stove

Information for use

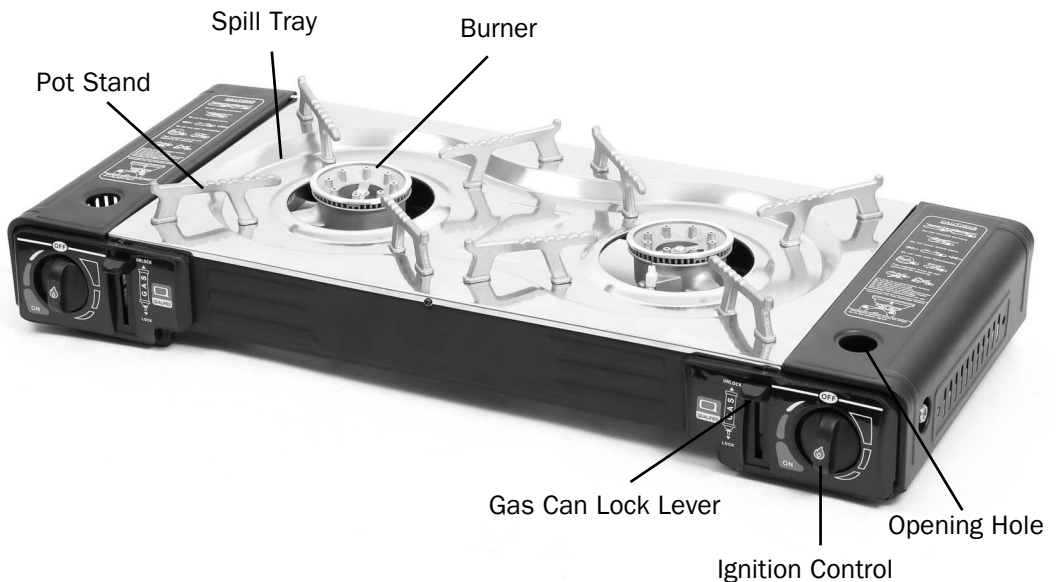

Intention For Use

Thank you for purchasing your Double Burner Portable Gas Stove from Streetwize Leisure.

Read these instructions for use carefully. Familiarise yourself with the appliance before connecting it to its gas canisters. Keep these instructions for future reference.

Health & Safety Guidelines

- Must only be used on a heat-resistant surface.
- Read the caution printed on the 227g Butane Gas Canisters before using (not supplied).
- Never store butane gas canisters near a heat source, open flame, or any source of ignition.
- Check that the canister is empty before removing it.
- Never store canisters in direct sunlight.
- Keep canisters away from children when not in use.

- Never refill the gas canisters.
- Gas canisters should be changed in a well-ventilated location, preferably outside, away from people and any sources of ignition, such as naked flames, pilot flames, electric heaters, or other equipment.
- Gas canisters can be purchased at most sporting goods and camping stores. Canisters must be butane gas. The gas canister is to be EN417 or UL 147B standard.
- CARBON MONOXIDE HAZARD. Only use in well-ventilated areas. Using this appliance in an enclosed space may cause death.
- Do not use it in caravans, tents, cars, mobile homes, or other enclosed spaces.
- Never leave the stove unattended when hot or when in use.
- Do not modify this appliance.
- Keep young children away from the appliance at all times.
- Keep the stove area clear and free of combustible materials, gasoline, or other flammable vapours or liquids.
- Do not obstruct the flow of ventilation and combustion air around the appliance.
- It is recommended to service it annually. If the injector gets blocked, it should be replaced by an authorised person.

If You Smell Gas

- Do not attempt to light this appliance.
- Extinguish any open flame.
- Disconnect from fuel supply.
- Evacuate the area and seek professional aid.
- Do not store or use gasoline or other liquids with flammable vapours in the vicinity of this or any other appliance.
- The stove is equipped for use with butane gas only. Do not attempt to operate this stove at temperatures below freezing (0 degrees C).

Fitting The Gas Canister

- Make sure the canister locking lever is in the 'UNLOCK' position or the gas canisters cannot be installed.
- Make sure the control knob is turned all the way clockwise to the "OFF" position (Fig.1)
- Open the gas canister cover and insert the canister so that the valve tab is aligned with the slot in the canister rim. (Fig.2)
- Check that the seals between the appliance and the gas canisters are in place and in good condition before connecting the gas canisters.
- Do not use this appliance if it has damaged or worn seals.
- Do not use this appliance if it is leaking, damaged, or does not operate properly.
- Push down on the canister lever to the "FUEL LOCK" position. (Fig.3).
- Note: If there is a leak from your appliance (smell of gas) and you cannot stop the gas flow, remove the appliance to a well-ventilated location away from any ignition source. Check for leaks using soapy water. Do not try to detect leaks using a flame.

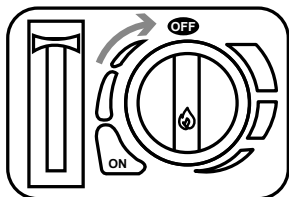


Fig. 1

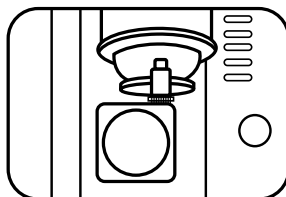


Fig. 2

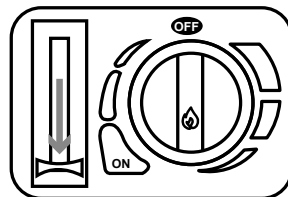


Fig. 3

- Caution: When connecting or disconnecting the gas canisters, be sure that no external sources of ignition are present.

WARNING

The openings at the base of the burners provide air for combustion; they should never be obstructed. If the flame becomes significantly orange, check these openings for a blockage. If the appliance cannot be adjusted to perform correctly, it should not be used until serviced or repaired.

Lighting The Stove

- Note: Close the canister cover before lighting. Not closing the cover causes the canisters to overheat.
- Turn the control knob anticlockwise until you hear a click indicating that a spark has been produced (Fig. 4).
- If the stove does not light, turn the control knob to OFF position and repeat.
- If, after three failed attempts, the stove does not light, turn the control knob to the “OFF” position and move the canister lever to the “UNLOCK” position.
- Open the canister cover and remove the canister to see if it’s empty.
- If empty, replace the canister and begin from (Fig. 1).

Adjusting The Heat

- The flame can be controlled by turning the ignition knob between the “IGNITION” and “OFF” positions.

Extinguishing

- Turn the ignition knob to “OFF” to shut off fuel supply (Fig. 5). Wait until the flame is fully extinguished before performing the next step. Raise the canister lock lever to “UNLOCK” and remove the gas canister from the compartment. (Fig.1)

NOTE: Do not leave the gas canisters inside the unit when not in use.

After Use

- Replace the cap on the gas canisters after removing them from the unit. Store upright in a cool, dry place.
- Make sure the burner is cool to touch before packing the unit away.

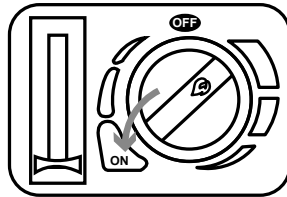


Fig. 4

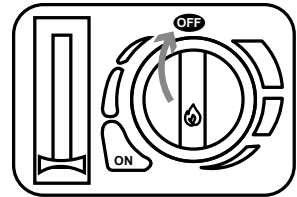


Fig. 5

Cleaning

- Keep your gas canisters & stove clean by using a stiff brush to clean.
- Use a soft cloth to clean greasy parts of the stove with soap and water. If the holes around the burner are blocked, use a toothpick to clean the burner.
- Keep your igniter and the burner head gap free from debris for easy lighting.
- Clean the stove frequently to avoid grease buildup and as necessary.
- Take out the canisters before cleaning the appliance.
- Use a damp dishcloth with a cleanser to clean the appliance, then wipe the appliance with a dry dishcloth.

Troubleshooting

Cause	Solution
The auto-gas shut-off safety device is engaged.	Take out the gas canisters, cool them, then use again.
Gas leakage happens at the valve.	Contact the seller.
The gas canister is connected to the valve entrance incorrectly.	Connect the gas canister to the valve entrance again.
The gas canister stem is not aligned correctly with the valve hole.	The gas canister stem should align with the valve hole, then move the pressure sensor-lock lever to the “Lock” position.

The Automatic Safety Shut-Off Device Activation

- When used in high-temperature areas outside, the internal pressure of the canisters may rise to more than 500kPa (normal pressure is 200–300 psi). This will activate the automatic safety shut-off device inside the regulator.
- Remove the gas canisters from the compartment.
- Turn the ignition knob to “IGNITION” to release any excess gas inside the regulator.
- Repeat the 3 steps for inserting the gas canisters after it has cooled down.
- Important warning: If you cannot find the cause of the safety device activation, discontinue use and contact us for customer service.

Technical Support

If you require any technical support for your product within the warranty period, please contact us on support@streetwize.co.uk and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

IMPORTANT: ADDITIONAL SAFETY INFORMATION

This product is **NOT** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning use of the product by a person responsible for their safety.

Technical Specification

Product name	Double Burner Portable Gas Stove
Product Code	LW716
Power	2.5kw
Fuel Consumption	110g/h
Dimintions	622 x 270 x 110mm
Weight	3.5kg
Type of Gas	Butane Gas
Ignition Type	Piezo-electric



Streetwize,
Suite GA, Marsland House
Marsland Road, Sale M33 3AQ

For Product Support:
E: support@streetwize.co.uk
T: +44 (0)161 447 8597

EU Regd. Address:
Ace Supply Co (Europe) Ltd.,
Dublin 2, D02 A098, ROI

www.streetwize.co.uk