



GW568

MGO Square Firepit/BBQ

Information for use _____

Important safeguards

- This product is for outdoor use only and should not be used in a building, garage or any other enclosed area. Toxic carbon monoxide fumes can accumulate and cause asphyxiation.
- Please bear in mind that this product is only intended to be used as a heater and to cook food.
- This product is not for commercial use.
- This product should only be used by adults; keep children and pets at a safe distance.
- Do not use petrol, white spirit, lighter fluid, alcohol or other similar chemicals to light a fire as a rapid increase in temperature could damage this product. This product is only suitable for use with charcoal, untreated wood or dry logs. Do not use coal.
- Do not use this product until it is completely assembled and all parts are securely fastened and tightened.
- Do not use the product on decking or any other flammable surfaces such as dry grass, wood chips, leaves.
- Always empty this product after use. Leave a thin layer of ash to protect the bottom. Do not remove ashes or charcoal until they are completely and fully extinguished.
- Do not touch this product until it is completely cooled unless you are wearing heat resistant gloves as it is hot when in use.
- Do not handle or move this product when in use as it is hot.
- Do not handle this product through the holes in the MGO body when in use. When in use the holes on the MGO body are used to let the air in and heat out.
- Do not attempt to store this product until all ashes and charcoals are completely extinguished.
- Always use a safety tool and heat resistant gloves when adding or moving fuel.
- Always use a safety tool and heat resistant gloves to move the grill shelf and mesh cover during use because this product will become very hot.
- Do not leave a burning fire unattended.
- Fire hazard-hot embers may emit while in use.
- Do not overload this product with fuel; a few small logs, 1600 g, is sufficient. Do not add additional fuel until the fire burns down.
- Do not burn fuel directly on the firebowl base. Do burn on the log grate or ash.
- Do keep the fuel away from the wall of the firebowl and the MGO as the high temperature may damage it.
- Avoid breathing smoke from the fire and avoid getting it into your eyes.
- Always thoroughly inspect this product before use.
- A slight discolouration of the finish may occur after use.

Care and use

SAFETY INFORMATION WARNING! This firepit/BBQ will become very hot, do not move it during operation. Do not use indoors!

WARNING! Do not use spirit or petrol for lighting or re-lighting! Use only firelighters complying to EN 1860-3!

WARNING! Keep children and pets away. Do not use the barbecue in a confined and/or habitable space E.g., houses, tents, caravans, motor homes, boats. Danger of carbon monoxide poisoning fatality. Do not use this appliance as a furnace.

Lighting a fire

1. Ensure this product is positioned on a permanently flat, level, heat-resistant, non-flammable surface away from flammable items.
2. Make sure there is a small amount of ash in the firebowl bottom.
3. Place paper or dry kindling on the log grate in the centre of the firebowl bottom.
4. Place fuel on the paper or dry kindling.
5. Light the paper or dry kindling to start a fire.

Tending to the fire

1. Add fuel to this product to increase the heat slowly when embers glow. Do not overload with fuel; only two small logs, like 1600g, are sufficient.
2. When shifting logs, use a safety tool to allow for additional airflow.

Extinguishing the fire

To extinguish the fire, stop adding fuel and allow it to die or douse with sand. Do not use water, as this may damage the product.

Care and inspecting

1. This product should be inspected on a regular basis to ensure product safety and longer product life.
2. This product should be cleaned after use to ensure longer product life. Do not use oven cleaner or abrasive cleaner as they will damage this product.
3. When the product is not in use and has completely cooled down, cover it to help protect it from bad weather.
4. Store this product in a dry location to maximise product life.
5. The surface of this product will age, discolour, and develop surface rust as soon as it is placed outside and after use. This is normal but does not affect use or the product. To refresh the paint finish. Remove loose paint and rust from the metal with a wire brush when needed and re-paint using a high-temperature paint resistant to at least 600°C. To help reduce surface rust, rub this product with an oily rag after each use.

Using as a BBQ

1. Before cooking, ensure the grill and tools are clean and free of old food residues.
2. Add about 0.5 kg of charcoal to the log grate and light according to the previous instructions.
3. Place the grill into the fireplace, ensuring it is stable.
4. Don't cook until the ash has coated the fuel.
5. Ensure all food is thoroughly cooked before eating.
6. After cooking, make sure to not remove the grill until it has completely cooled.
7. Once it is cooled, clean the grill and tools.

Streetwize,
Suite GA, Marsland House,
Marsland Road, Sale M33 3AQ

For Product Support:
E: support@streetwize.co.uk
T: +44 (0)161 447 8597

EU Regd. Address:
Ace Supply Co (Europe) Ltd.,
Dublin 2, D02 A098, ROI

www.streetwize.co.uk