



LW725

# Compact Induction Hob

Information for use \_\_\_\_\_



## Intention For Use

Thank you for purchasing your Induction Hob from Streetwize Leisure. This space saving induction hob is perfect for sautéing, boiling or simmering. It is ideal for use in caravans & motorhomes, and it can act as an additional hob in any kitchen setting.

Read these instructions for use carefully. Familiarise yourself with the appliance before use. Keep these instructions for future reference.

## Features Of Your Product

### 7 Cooking Power Levels:

Display	P1	A2	A3	A4	P5	P6	P7
Power (W)	200	400	600	800	1000	1200	1400

### 9 Cooking Temperature Levels:

Display	F1	F2	F3	F3	F4	F5	F6	F7	F8
Temperature (°C)	60	90	120	140	160	180	200	220	240



## Health & Safety Guidelines

- Always unplug the unit when not in use, before cleaning, or when adding or removing parts. Please read the instructions carefully before using any appliance.
- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The appliance is intended for household use only. Commercial use invalidates the warranty, and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
- Do not let children use this appliance unsupervised.
- Check the power cord and plug regularly for any damage. To prevent an electrical hazard, the manufacturer will need to replace the cord or plug if it is damaged.
- Do not use the appliance if it has been dropped or damaged in any way. If the unit is damaged, take it in for examination and/or repair by an authorized service agent.
- To reduce the risk of electric shock, do not immerse or expose the motor assembly, plug, or power cord to water or any other liquid.
- Never immerse the unit in water or any other liquid for cleaning purposes. Do not reach for an appliance that has fallen into the water. Unplug immediately.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains.
- Injury, fire, or electric shock could result from the use of accessory attachments that the manufacturer has not approved or supplied.
- A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
- Do not let the cord hang over the edge of a table or counter, ensure that the cord is not in a position where it can be pulled inadvertently.
- Do not allow the cord to touch hot surfaces, and do not place it on or near a hot gas or electric burner or in a heated oven. Do not place the unit on a hot surface.
- This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended purpose.
- Do NOT carry the unit by the power cord.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use or for repairs carried out by unauthorised personnel.
- In the event of technical problems, switch off the appliance and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment, or repair.
- Always insist on the use of original spare parts. Failure to comply with the above-mentioned precautions and instructions will affect the safe operation of this machine.
- We do not recommend using extension cords with this product.
- CAUTION: Hot surface. This electrical appliance operates at high temperatures which could cause burns.
- Do not heat the pot empty or overheat the pot.
- Do not place metallic objects such as knives, forks, spoons, lids, cans, and aluminum foils on the top plate.
- Do not use the appliance on carpet, tablecloth (vinyl) or any other low-heat-resistant object.
- Do not block the vents.
- Do not touch the heating zone right after removing the pot or the pan, as it will be still very hot.

### Only use cookware that is suitable for induction hobs:

- **Suitable cookware consists of pots and pans with a base made of steel or cast iron. You can identify these either by the markings on the cookware or by determining whether a magnet clings to the pan's base.**
- **Unsuitable cookware is any non-magnetic metal, including aluminium, copper, and stainless steel, as well as non-metallic vessels made of porcelain, glass, ceramic, plastic, etc.**
- **Thin pan bases are better suited to induction cooking than thick sandwich bases. Using pans with thick bases prevents setting modifications, such as a short preheating period and rapid and controllable browning.**

**Only use cookware that is suitable for the size of the hob. This is the only way to ensure that the induction hob functions perfectly. The base of the pan may not be uneven; rather, it must sit flat.**

**The diameter may not be less than 10 cm to ensure that the energy field has an effect. Do not use pans with a diameter in excess of 20 cm.**

# Using The Appliance

## Power On

- When plugging in the appliance, the buzzer alerts, the LED screen flashes once and shows “-” or “H”, and the cooker enters Power On mode.

## Standby

- After plugging in the appliance, press and hold the knob until the LED screen shows “ON” and the cooker enters standby mode and becomes ready to use.
- After switching on, turn the knob to select the cooking function.
- After entering standby mode, the cooker will return to power-on mode if there is no operation for 30 seconds.

## Switch Off

- When the appliance is working or switched on, press and hold the knob until the LED screen shows “-” or “H”. The cooker will stop working and enter power-on mode.

## Cooking Power Function

1. If it is in standby mode, turn the knob to the right until the LED screen displays “P5” and the AUTO LED lights up.
2. The levels could be adjusted from P1 to P7 by twisting the knob left or right.
3. Press the knob again, and the LED will illuminate in the following order. There are three LEDs: AUTO (Cooking Power Function), TIME (Cooking Power Function Timer), and HEAT (Cooking Temperature Function).
4. To modify the time from 0 to 99 minutes, turn the knob left or right while the TIME LED lights and the LED screen displays “0”. The time will be confirmed after 5 seconds.

## Cooking Temperature Function

1. If it is in standby mode, turn the knob to the right until the LED screen displays “P5” and the AUTO LED lights up.
2. The levels can be adjusted from P1 to P7 by twisting the knob left or right.
3. Press the knob again, and the LED will illuminate in the following order. There are three LEDs: AUTO (Cooking Power Function), TIME (Cooking Power Function Timer), and HEAT (Cooking Temperature Function).
4. To modify the time from 0 to 99 minutes, turn the knob left or right while the TIME LED lights and the LED screen displays “0”. The timing will be confirmed after 5 seconds.

## Timer Function

1. Press the knob until the TIME LED illuminates.
2. To alter the time from 0 to 99 minutes, turn the knob to the left or right when the TIME LED lights and the LED screen displays “0”. The timing will be confirmed after 5 seconds.
3. During the timer function, press the knob again to see the remaining time. The time can be modified further at this time.
4. During timer function, LED display shows “Remaining time” and “Cooking Power Level” or “Cooking Temperature Level”.

## High Temperature Indicator

- If the temperature of the glass surface exceeds 50°C while the switch is turned off, the LED screen displays “H”. If the temperature of the glass surface is below 50°C, the LED screen displays “-”.

## Cooling Fan Operation

- The fan will keep working for 2 minutes for heat dissipation after you have switched the appliance off cooking mode.

## Auto Shut-off

- After you turn off the appliance, the fan will continue to run for two minutes to dissipate heat.

# Cleaning & Maintainance

- Turn off the appliance by pressing the knob and wait until the LED screen shows “-”. Unplug the power cord.
- Allow the appliance to cool. To remove dirt from the surface, use a mild detergent or dishwashing liquid with a soft cloth. Do not use abrasives or strong detergents, as they may damage the cooker top.
- Always make sure that the top plate and the pan or pot are clean before cooking; otherwise, the dirt from the pan or pot will stick to the top plate.
- You may use a vacuum cleaner to remove any debris from the vent.
- Use a dry cloth to remove any oil from the vent.
- To wipe the appliance dry, use a dry, soft cloth.

## Troubleshooting

 
Problem	Cause	Solution
LED screen is not on.	Power cord is not connected well.	Ensure the plug inserted into the socket.
Switch off automatically.	<ul style="list-style-type: none"> <li>Appliance has overheated.</li> <li>No operation in two hours.</li> </ul>	Restart the hob.
LED shows <b>E0</b>	<ul style="list-style-type: none"> <li>No pot.</li> <li>Pot too small.</li> <li>Not suitable pot material.</li> </ul>	Put the suitable pot on the surface of the hob.
LED shows <b>E2</b>	Temperature sensor open circuit or short circuit.	Return the hob to the service center for checking and repairing.
LED shows <b>E3</b>	High voltage protection.	Ensure 150V<voltage<270V, 220V~240V is preferred.
LED shows <b>E4</b>	Too low voltage protection.	Ensure 150V<voltage<270V, 220V~240V is preferred.
LED shows <b>E5</b>	High temperature protection.	Allow to cool and reset the appliance by powering off and back on.
LED shows <b>E6</b>	Appliance has overheated.	Check if the air intake and outlet is blocked, restart the hob.

## Technical Support

If you require any technical support for your product within the warranty period, please contact us on **support@streetwize.co.uk** and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

### WEEE



The WEEE symbol  on this product means that this unit should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.

## IMPORTANT: ADDITIONAL SAFETY INFORMATION

This device is **NOT** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning use of the device by a person responsible for their safety.

## Technical Specification

Product name	Compact Induction Hob
Supplier Code	LW725
Voltage	220-240V~
Frequency	50/60Hz
Overheat Protection	Yes
Auto Switch Off	Yes - Excluding Timer Mode
Timer	Yes
Wattage	200W - 1400W variable



**Streetwize,**  
Suite GA, Marland House,  
Marland Road, Sale M33 3AQ

**For Product Support:**  
**E:** support@streetwize.co.uk  
**T:** +44 (0)161 447 8597

**EU Regd. Address:**  
Ace Supply Co (Europe) Ltd.,  
Dublin 2, D02 A098, ROI

[www.streetwize.co.uk](http://www.streetwize.co.uk)